HOME
DECORATORS
COLLECTION

BF-25127 KIDS CUBE STORAGE 34.85″HX12″W(GIRL)

INV#16261

ASSEMBLY INSTRUCTIONS

Made In China

THIS ITEM MUST BE ASSEMBLED BY AN ADULT

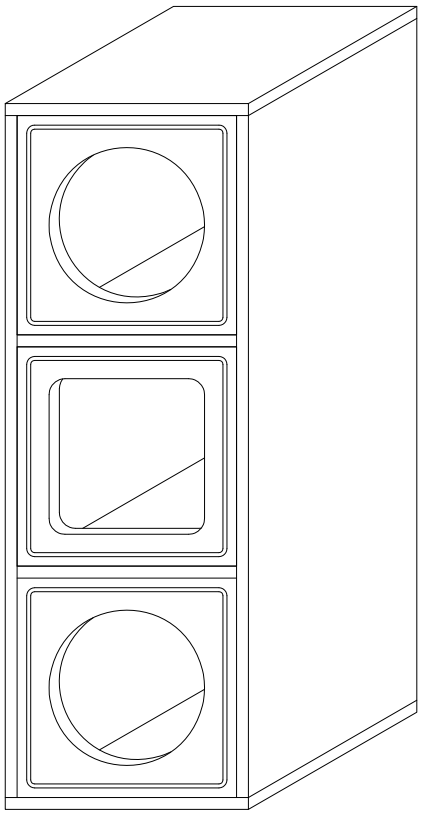

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  PANELS-2PCS	B  SIDE PANELS-2PCS	C 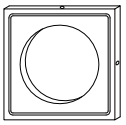 FRONT PANELS-2PCS
D FRONT PANEL-1PC	E  ACROSS PANELS-2PCS	F BACK PANEL-1PC
G 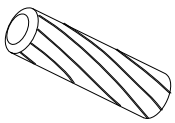 DOWELS-12PCS	H CAM-TOOL-1PC	I  CAM-BOLTS-16PCS
J CAM-LOCKS-16PCS	K 7mm × 5/8"  SCREWS-14PCS	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

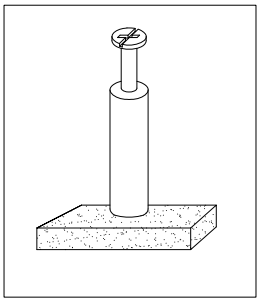

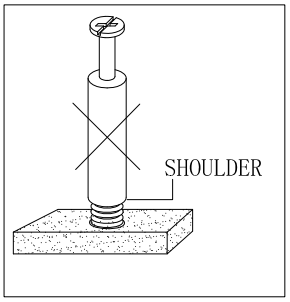

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

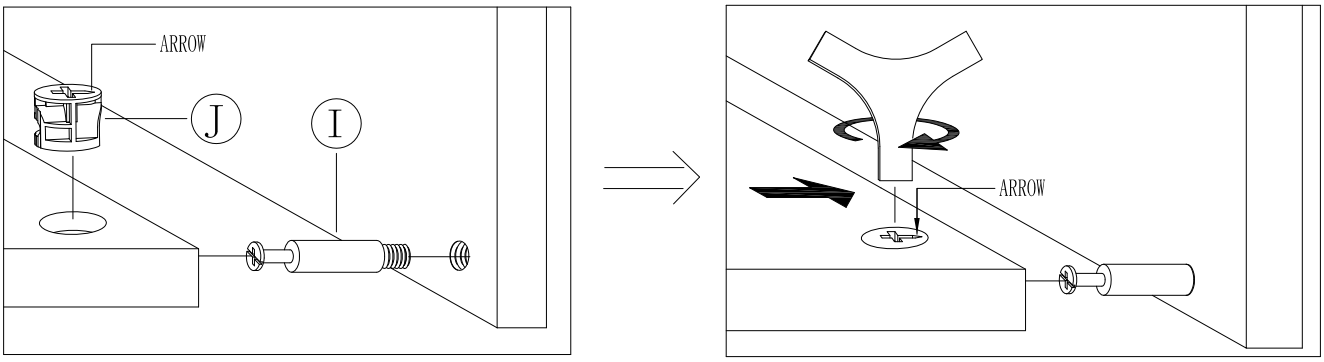

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

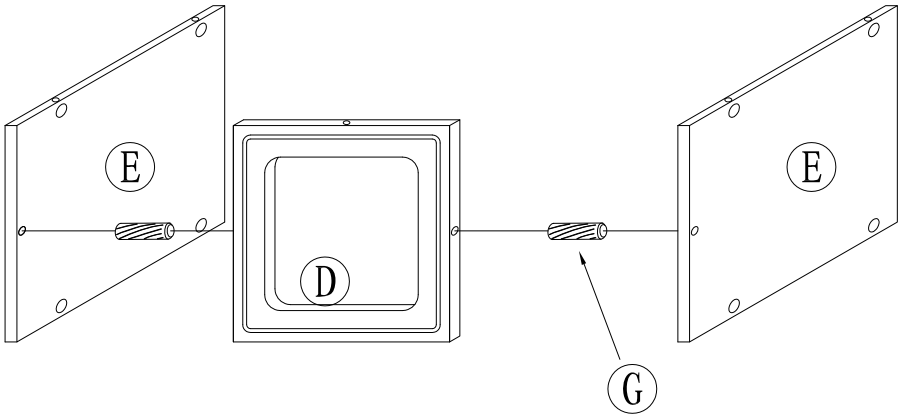

1). ASSEMBLE THE FRONT PANEL(D).

- INSERT 2 DOWELS(G) INTO THE HOLES IN THE FRONT PANEL(D).
- ATTACH ACROSS PANELS(E) TO FRONT PANEL(D).

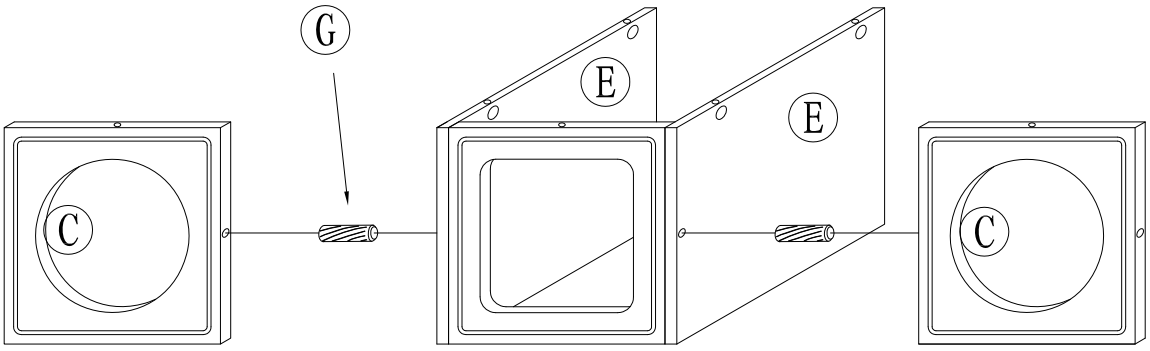

2). ASSEMBLE THE FRONT PANELS(C).

- INSERT 2 DOWELS(G) INTO THE HOLES IN THE ACROSS PANELS(E).
- ATTACH FRONT PANELS(C) TO ACROSS PANELS(E).

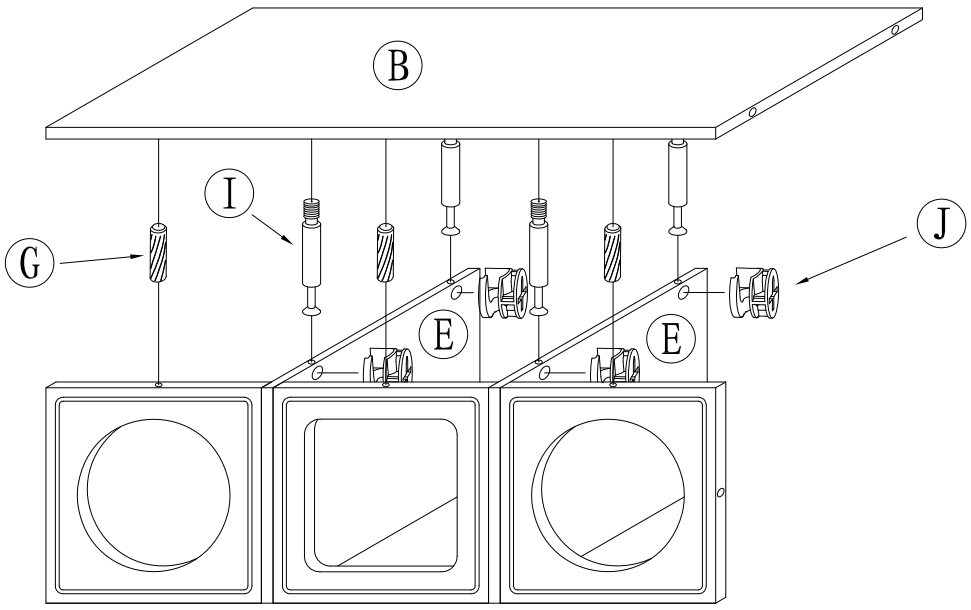

3). ASSEMBLE THE SIDE PANEL(B).

- ROTATE 4 CAM-BOLTS(I) AND INSERT 3 DOWELS(G) INTO THE HOLES IN THE SIDE PANEL(B).
- PLACE CAM-BOLTS(I) INTO THE HOLES IN THE PANELS(E) AND ATTACH USING 4 CAM-LOCKS(J).

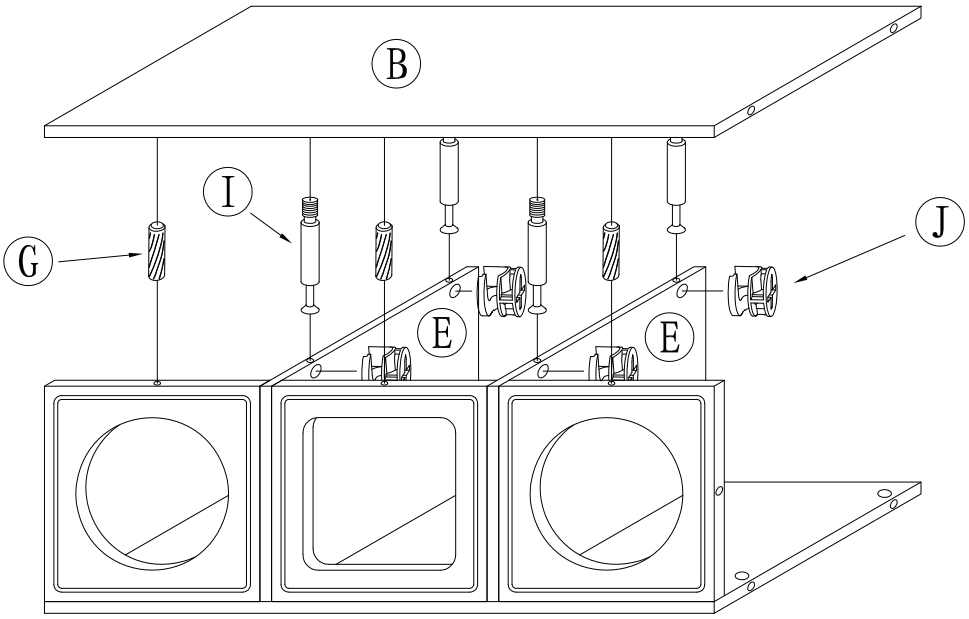

4). ASSEMBLE THE SIDE PANEL(B).

- ROTATE 4 CAM-BOLTS(I) AND INSERT 3 DOWELS(G) INTO THE HOLES IN THE SIDE PANEL(B).
- PLACE CAM-BOLTS(I) INTO THE HOLES IN THE PANELS(E) AND ATTACH USING 4 CAM-LOCKS(J).

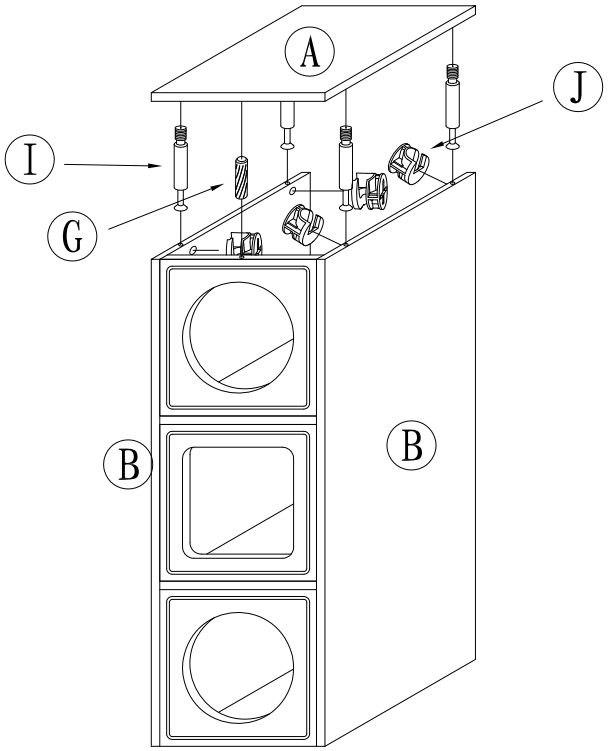

5). ASSEMBLE THE PANEL(A).

- ROTATE 4 CAM-BOLTS(I) AND INSERT 1 DOWEL(G) INTO THE HOLES IN THE PANEL(A).
- PLACE CAM-BOLTS(I) INTO THE HOLES IN THE PANELS(B) AND ATTACH USING 4 CAM-LOCKS(J).

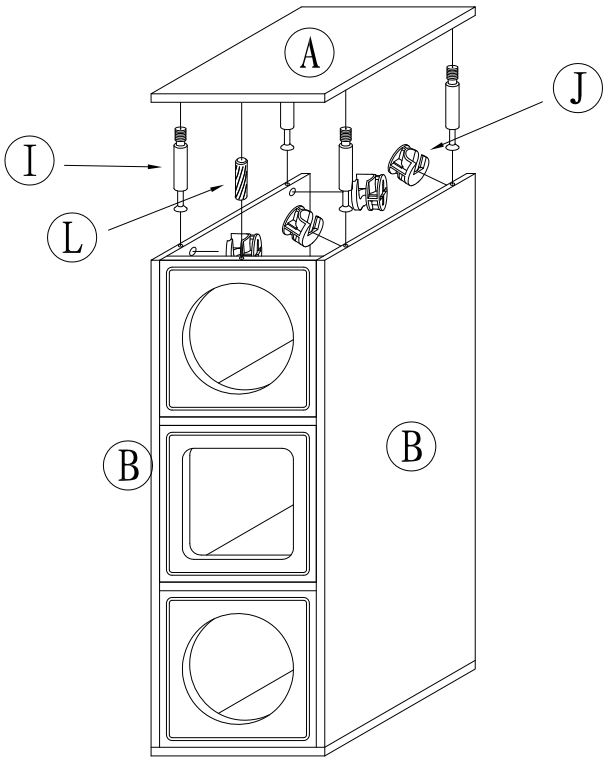

6). ASSEMBLE THE PANEL(A).

- ROTATE 4 CAM-BOLTS(I) AND INSERT 1 DOWEL(G) INTO THE HOLES IN THE PANEL(A).
- PLACE CAM-BOLTS(I) INTO THE HOLES IN THE PANELS(B) AND ATTACH USING 4 CAM-LOCKS(J).

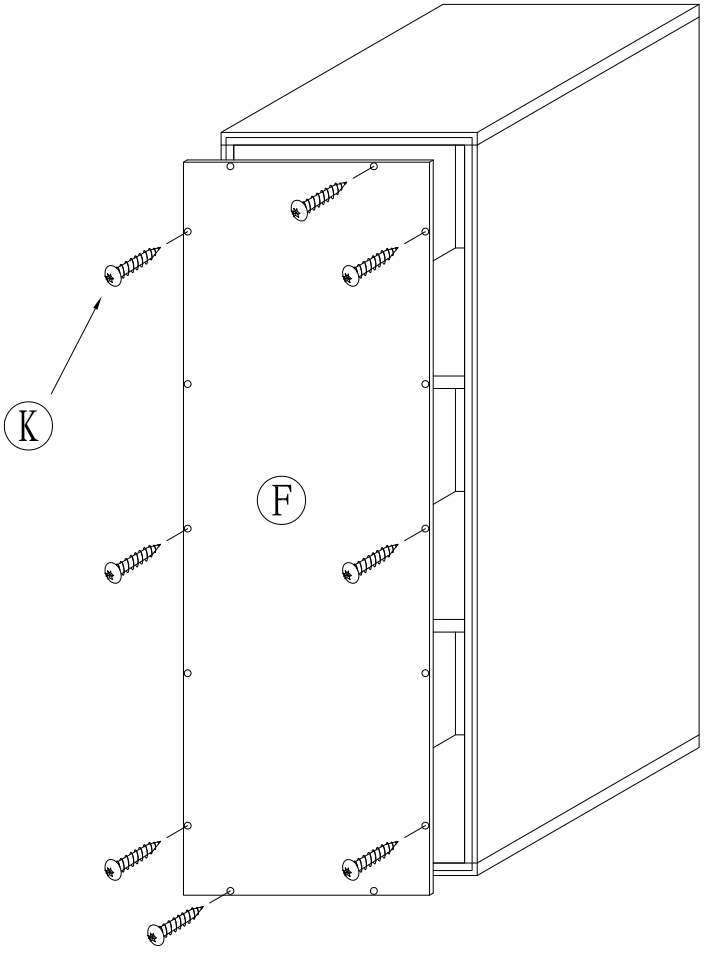

7). ASSEMBLE THE BACK PANEL(F).

- ATTACH THE BACK PANEL(F) USING 14 SCREWS(K).